

Lodgesons B213 Bleeper System

User Instructions



Lodgesons B213 Bleeper System

User Instructions

The Lodgesons B213 Bleeper System is designed to operate up to thirteen of your vehicle's secondary controls using one switch. The switch can be any momentary closing pair type, and placed at any location suitable for the driver. Pressing the switch makes the Lodgesons B213 Bleeper System bleep eleven times; releasing the switch at a particular bleep operates that function.

In use, you do not need to wait for the end of the bleep to operate the function. At the instant the bleep starts, the switch can be released and the function is selected. Although releasing the switch operates a particular function, they do operate differently as described below.

Operating Instructions

ON/OFF	The bleeper system turns on and off automatically with the vehicle's ignition system. The system always starts in the same condition (indicators & wipers off, lights set to dip).
Bleep 1 LIGHTS	With headlights off - when the switch is released at this bleep, the lights will flash for half a second. After this, you have half a second to press the switch to flash the lights again. If the switch is not pressed in this time, the system gives a short bleep and resets itself. If the switch is repressed before the short bleep, the headlights will stay on until the switch is released. After releasing the switch, you have half a second to press the switch to flash the lights again. If the switch is not pressed in this time, the system gives a short bleep and resets itself. Pressing the switch after this restarts the list of bleeps. With the headlights on - when the switch is released at this bleep, the lights alternate between dip and main beam. After selection, you will have to wait half a second while the system gives a short bleep and resets itself before you can restart the bleep list.
Bleeps 2 & 3 LEFT & RIGHT INDICATORS	When the switch is released at either bleep, the left or right indicator is operated. To switch this off, press the switch again, restarting the bleep list, and release the switch at the appropriate bleep. You can switch directly from one indicator to the other e.g. if the left indicator is on, selecting the right cancels the left and switches the right indicator on. After selection, you can restart the bleep list immediately.
Bleep 4 HORN	When the switch is released at this bleep, the horn will sound for half a second. After this, you have half a second to press the switch to sound the horn again. If the switch is not pressed in this time, the system gives a short bleep and resets itself. If the switch is repressed before the short bleep, the horn will stay on until the switch is released. After releasing the switch, you have half a second to press the switch to sound the horn again. If the switch is not pressed in this time, the system gives a short bleep and resets itself. Pressing the switch after this restarts the list of bleeps.

Lodgesons B213 Bleeper System

User Instructions

Bleep 5 FRONT WASHERS	When the switch is released at this bleep, the front washers will operate for half a second. After this, you have half a second to press the switch to operate the washers again. If the switch is not pressed in this time, the system gives a short bleep and resets itself. If the switch is repressed before the short bleep, the front washer will stay on until the switch is released. After releasing the switch, you have half a second to press the switch to operate the washers again. If the switch is not pressed in this time, the system gives a short bleep and resets itself. Pressing the switch after this restarts the sequence of bleeps.
Bleep 6 FRONT WIPERS ON (LOW SPEED)	When the switch is released at this bleep, the low speed front wipers are switched on. After selection, you can restart the bleep list immediately.
Bleep 7 FRONT WIPERS ON (INTERMITTENT)	When the switch is released at this bleep, the intermittent front wipers are switched on. After selection, you can restart the bleep list immediately.
Bleep 8 FRONT WIPERS OFF	When the switch is released at this bleep, the front wipers are switched off. After selection, you can restart the bleep list immediately.
Bleep 9 FRONT WIPERS ON (HIGH SPEED)	When the switch is released at this bleep, the high speed front wipers are switched on. After selection, you can restart the bleep list immediately.
Bleep 10 REAR WASH/WIPE	When the switch is released at this bleep, the rear wiper is switched on. If the button is repressed within half a second the rear washer will operate for as long as the button is held. If the switch is not pressed in this time, the system gives a short bleep and restarts itself. To switch the rear wiper off, press the switch again, restarting the bleep list, and release the switch at bleep 10.
Bleep 11 NO FUNCTION	On the final bleep no function is operated and the cycle is ended. Release button and re-press to restart the cycle.
Warranty	Your B200 system must only be installed by an accredited Lodgesons installer. The system is covered by a three year 'back to base' parts and labour warranty, providing you have registered your system either via our website (www.lodgesons.co.uk/warranty.aspx), or by completing the attached guarantee card. All claims must be made via your installer. Conditions apply.