


Lodgesons R200 Wireless Keypad Controls

Your keypad will control the functions in the same way as your car's own controls, and therefore functions may vary slightly from car to car and to those listed below. Please take time to familiarise yourself with your new keypad, especially if you have a new car.

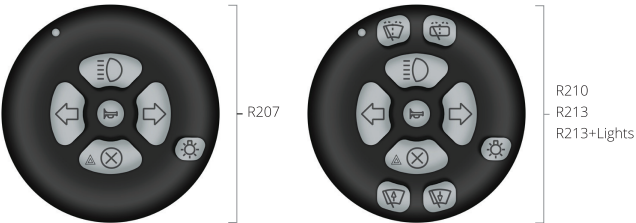

Which functions do I have?

	R207	R210	R213	R213+Lights
Indicators	✓	✓	✓	✓
Lights (dip / main & flash)	✓	✓	✓	✓
Horn	✓	✓	✓	✓
Front Wipers		✓	✓	✓
Front Washers		✓	✓	✓
Rear Wash/Wipe			✓	✓
Sidelights & Headlights On/Off				✓
Night-time Illumination	✓	✓	✓	✓
Hazards*	✓	✓	✓	✓

*If requested at time of order. Not available on all vehicles.

User Instructions



Power

Your keypad may or may not have a power button. Keypads without a power button will work automatically. If your keypad does have a power button, a long press (2 seconds) will turn the keypad on. Please note once the keypad has been turned on, you do not need to turn it off again.



Indicators

Your indicators will work in the same way as your car's controls. A brief press will turn the indicator on for one to three flashes (not available on all vehicles). A longer press (half a second) will latch the indicator on until cancelled. You can cancel the indicators by pressing the indicator button again or by pressing the cancel button ⊗ (varies from car to car). Indicators will self-cancel on some car models.



Horn

Press to sound the horn.



Dip / Main & Flash

When headlights are OFF, press to flash headlights. When headlights are ON, a brief press will change to low-beam or high-beam.

Battery

Your keypad uses a quality 3 volt CR123A lithium non-rechargeable battery ONLY. Battery life is largely dependent upon usage of the illumination (as this uses considerably more power than the functions alone), but at a minimum the battery should last approximately 110 hours of total illumination time.

Changing the battery

To change the battery in the keypad with a lollipop grip; remove the 3 screws at the back of the lollipop and the keypad should drop out, giving you access to the battery inside the keypad.

To change the battery in the keypad with a steering ball grip; remove the 3 central screws at the back of the keypad and unclip the battery cover.



Illumination

Press and hold the indicator cancel button for 5 seconds to turn the illumination on and off. The illumination will turn itself off after 25 minutes of keypad inactivity, and shortly after the vehicle ignition is switched off.



Front Wipers

Up button: Press once for intermittent / rain sensor, press a second time for low speed and press a third time for high speed.



Down button: The reverse of the above applies. On some vehicles, if the wipers are on, a long press (2 seconds) will turn all wipers off; if the wipers are off, a short press will give a single wipe.



Front Washers

Press and hold to turn on the front washer. On many cars this will also activate the front wipers.



Rear Wiper & Washer

A short press turns the wiper on and off. Press and hold to turn on the rear washer and wiper.



Hazards

If the hazard option has been connected, press briefly three times to turn hazards on and off. This option is not available on all vehicles.



Headlights

Press once for sidelights; press again for sidelights AND headlights. A long press (2 seconds) will turn both headlights and sidelights off.

Warranty

Your R200 system must only be installed by an accredited Lodgesons installer. The system is covered by a three year 'back to base' parts and labour warranty, providing you have registered your system either via our website (www.lodgesons.co.uk/warranty-registration), or by completing the attached guarantee card. All claims must be made via your installer. Conditions apply.